andrew james

Mini Oven with hobs

Please read the manual fully before using the appliance and keep the manual safe for future reference.

Contents page

Safety Instructions	Page 3
Using your oven	Page 5
How to use Hot Plate function	Page 6
Cleaning	Page 6
Disposal of the appliance	Page 8
UK and EU Guarantee	Page 8
Electrical Information	Page 9

Safety instructions

When using any electrical appliance, basic safety precautions should always be followed including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas or electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.
- Always operate the appliance on a smooth, even and stable surface. Do not

place the unit on a hot surface.

- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.
- Always operate the appliance on a smooth, even and stable surface. Do not place the unit on a hot surface.
- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.

Appliance specific safety instructions

- When operating the oven make sure there is at least 4 inches of space on all sides of the oven to allow for adequate air circulation.
- After use, always let the oven cool down before transporting or cleaning.
- Do not support yourself on the glass door.
- Do not place objects on the glass door, this could damage the hinges.

Before using your oven/grill

Be sure to:

1. Read all the instructions included in the manual.
2. Make sure that the oven is unplugged and the Time control is in the "Off" position.
3. Wash the accessories in hot soapy water or in the dishwasher.
4. Thoroughly dry all the accessories and re-assemble them in the oven, plug the oven into an outlet, you are now ready to now use your oven.
5. After assembling your oven, we recommend that you run it at the highest temperature on the grill function for approximately 15 minutes to eliminate any packing residue that may remain after production. This will also remove all traces of odour initially present.

Please note: When first using the appliance it may emit a little smell and smoke, this is normal and harmless. It is due to the burning off of the protective substance applied to the heating elements in the factory. The oven grill is intended for the heating, cooking and grilling of food. The convention setting is for equal and rapid distribution of the heat in the appliance.

Using your Oven

Temperature control: Choose the desired temperature from 100°C to 250°C for cooking.

Hotplates control: This oven is equipped with four positions for a variety of cooking needs:

:Off

:Switch for the left hotplate

:Switch for the right hotplate

:Switch for double hotplates

Oven Grill Control:

:Grill-Upper heating element working together with convection function

:Baking– Lower heating element for baking cakes, pies, cookies etc.

Time control: To set the timer, turn the timer control knob clockwise. This function has a bell which will ring at the end of the programmed time.

Note: The timer must be turned on in order for the Hob, Grill and oven to function.

Grilling and convection

For the best results it is recommended that you preheat the oven for 15 minutes on 250°C.

Operation

1. Turn function switch to
2. Preheat the oven.

3. Place the baking tray into the oven.
4. Food should be placed as close as possible to the top heating element without touching it.
5. Set the temperature control to the appropriate temperature.
6. Turn the time control to the desired cooking time. When grilling is complete the bell will ring. It is advisable to leave the door open slightly.

Baking

Operation

- Place the wire rack or the baking tray in the lowest or middle rack support.
- Preheat the oven for approximately 15 minutes.
- Place food to be cooked on the wire rack or the baking tray.
- Turn the function control to
- Turn the control to desired cooking time. When baking is complete the bell will ring.

How to use Hot Plate function

The wattage of the left hotplate: 800W

The wattage of right hotplate: 600W

1. Place a pot or pan onto the desired hotplate and start cooking.
2. Do not leave the appliance on without any pots or pans on the hotplate. This will damage the hotplate and cause excessive heat.

Cleaning

1. It is important that you clean the appliance after each use to prevent an accumulation of grease and avoid unpleasant odours.
2. Allow the appliance to cool and unplug the appliance from the outlet before cleaning.
3. Do not immerse the appliance in water or wash it under a waterspout.

4. Removable wire rack, bake pan, crumb tray can be washed as normal kitchenware.

5. Clean the outside of the appliance with a damp sponge.

6. Do not use household detergents or sharp pointed objects to remove dried on food. They could damage the special coating on the inner walls of the oven.

7. Use a soft cloth, lightly moistened with a mild soapy solution to clean the inside of the oven.

8. Let all parts and surfaces dry thoroughly prior to plugging the oven in and using it.

Disposal of the appliance

Please note that this Andrew James product is mark with this Symbol:

This means that this product must not be disposed of together with ordinary household waste, as electrical and electronic waste must be disposed of separately.

In accordance with the WEEE directive, every member state must ensure correct collection, recovery, handling and recycling of electrical and electronic waste. Private households in the E.U. can take used equipment to special recycling stations free of charge. In certain member states used apparatus can be returned to the dealer where they were bought on the condition you buy new products. Contact your retailer, distributor or the municipal authorities for further information on what you should do with electrical and electronic waste.

UK and EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic use only and is not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to
www.andrewjamesworldwide.com
Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

Electrical information

Please note:

It is extremely important that the wires or cores in the flex are connected to the correct terminals in the plug. If the colour of the mains lead of the appliance does not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

- The **Live** (**Brown**) wire connects to the right- most live (L) terminal nearest to the fuse.
- The **Neutral** (**Blue**) wire connects to the left-most neutral (N) terminal.
- The **Earth** (**Green and Yellow**) wire connects to the central, top most earthed (**E**) terminal.

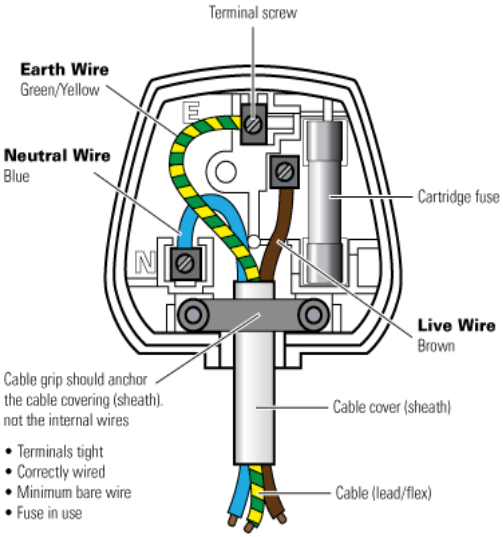

Warning:

If the appliance is double insulated indicated by the double insulated symbol: ⧈

it should not have an earth wire or earth connection.

Plug

The plug must be protected by the correct AMP fuse; this will be indicated on the case of the plug. Only BSI or ASTA approved fuses should be used. When changing the fuse always replace it with a fuse that is of the same identical rating as the original. If you are unsure about which plug or fuse to use, always refer to a qualified electrician.

Please note after replacing the fuse, ensure that the cover is correctly fitted back onto the plug. Never attempt to run the appliance if the plug does not have a cover. If a moulded plug is fitted and has to be removed take great care in disposing of the

plug and severed cable, it must be destroyed to prevent it from engaging into a socket. If the supply cord is damaged it must be replaced by a service agent or a similarly qualified person in order to avoid a hazard.

All of our electrical appliances conform to pre-existing EC Directives 2006/95/EC (Low Voltage Directive) and 2004/108/EC (EMC Directives).

For further information please visit http://www.esc.org.uk/industry/product-safety/product-testing-screening/kitchen-appliances/

Copyright Andrew James